

 MONARCH WATER

# BYPASSING YOUR MONARCH SOFTENER



EVOLUTION SINCE 1964

## / BYPASSING YOUR WATER SOFTENER

### NORMAL SERVICE POSITION



The picture to the right and below shows the water softener in the normal Service position i.e.

**INLET VALVE:** This valve is Open when the blue handle is in line with the hoses.

**OUTLET VALVE:** This valve is Open when the blue handle is in line with the hose.

**BYPASS VALVE:** This valve is Closed when either a Black handle or Screwdriver slot is at 90° to the pipe.

### SOFTENER TURNED ON

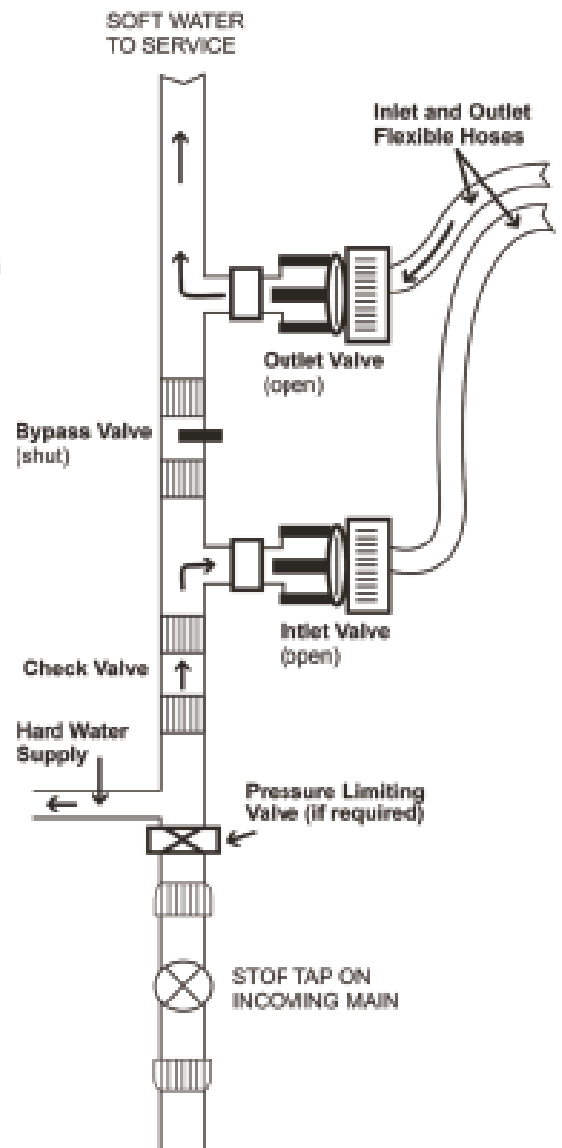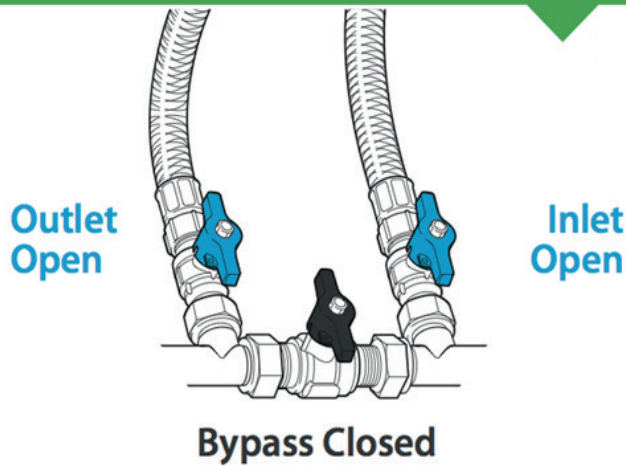


### BYPASSING YOUR WATER SOFTENER

**INLET VALVE:** Turn blue handle 90° so it closes the flow of water through this valve.

**OUTLET VALVE:** Turn blue handle 90° so it closes the flow of water through this valve.

**BYPASS VALVE:** Turn Black handle or Screwdriver slot 90° so that it is now in line with the pipe. This will then open this valve and allow water through to your system.

### SOFTENER TURNED OFF

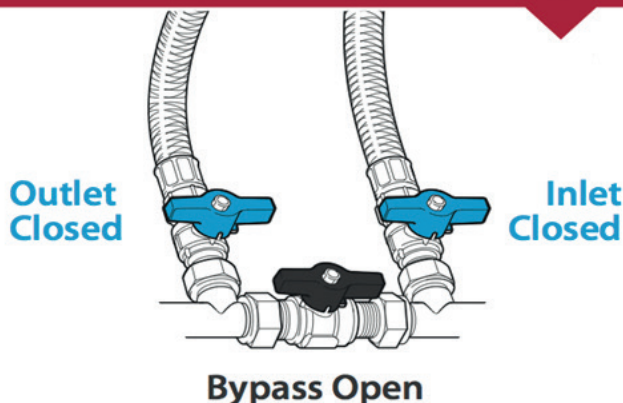

## / BYPASSING YOUR WATER SOFTENER FOR TEE VERSION BYPASS INSTALLATIONS


**NORMAL SERVICE POSITION** – all handles face the same way.

The diagram below shows the water softener in the normal Service position.

**INLET VALVE:** This valve is Open when the handle is 90° to the hose connected to it i.e. it 'points' to the hose connection.

**OUTLET VALVE:** This valve is Open when the handle is 90° to the hose connected to it i.e. it 'points' to the hose connection.

**BYPASS VALVE:** This valve is Closed when either a Black handle or Screwdriver slot is at 90° to the pipe.

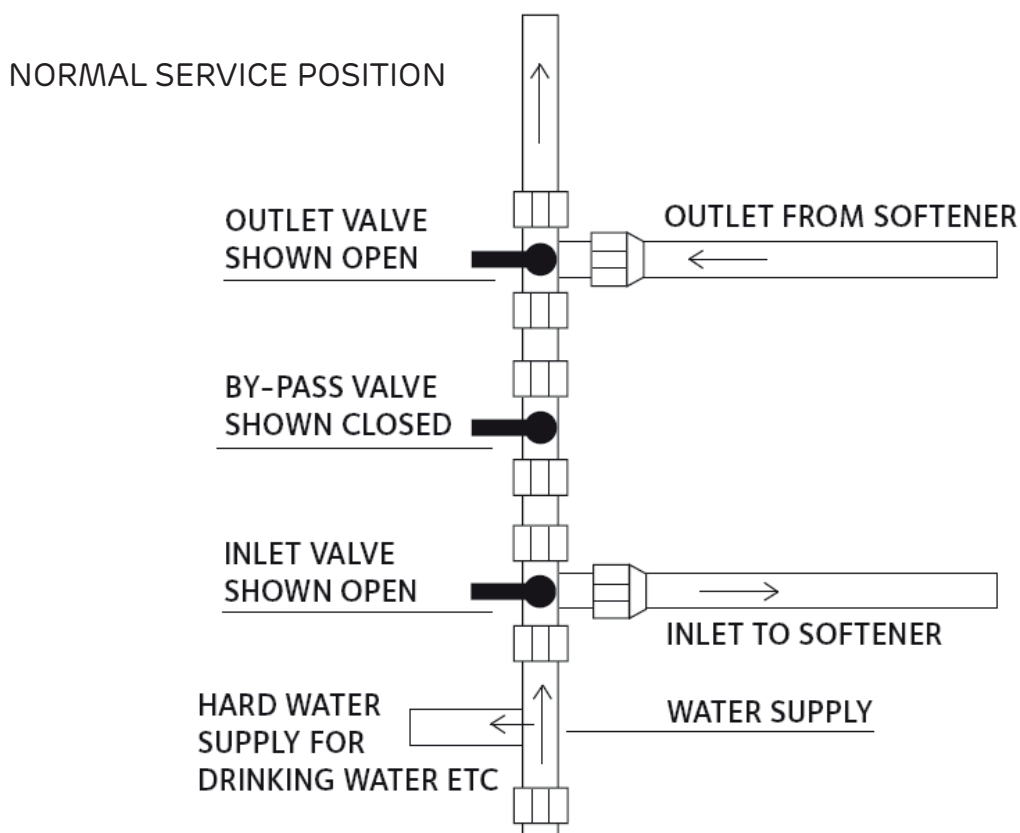

**BYPASSING YOUR WATER SOFTENER** – all handles have effectively been turned 90°

**INLET VALVE:** Turn handle 90° so it closes the flow of water through this valve, handle is now in line with the pipe.


**OUTLET VALVE:** Turn handle 90° so it closes the flow of water through this valve, handle is now in line with the pipe.

**BYPASS VALVE:** Turn handle or Screwdriver slot 90° so that it is in line with the pipe, this will then open this valve and allow water through to your system.

## / BYPASSING YOUR WATER SOFTENER WITH RAPID-FIT BYPASS

### UNIT IN SERVICE:

To place Rapid-Fit bypass into Service, push central plunger in direction of Service arrow.

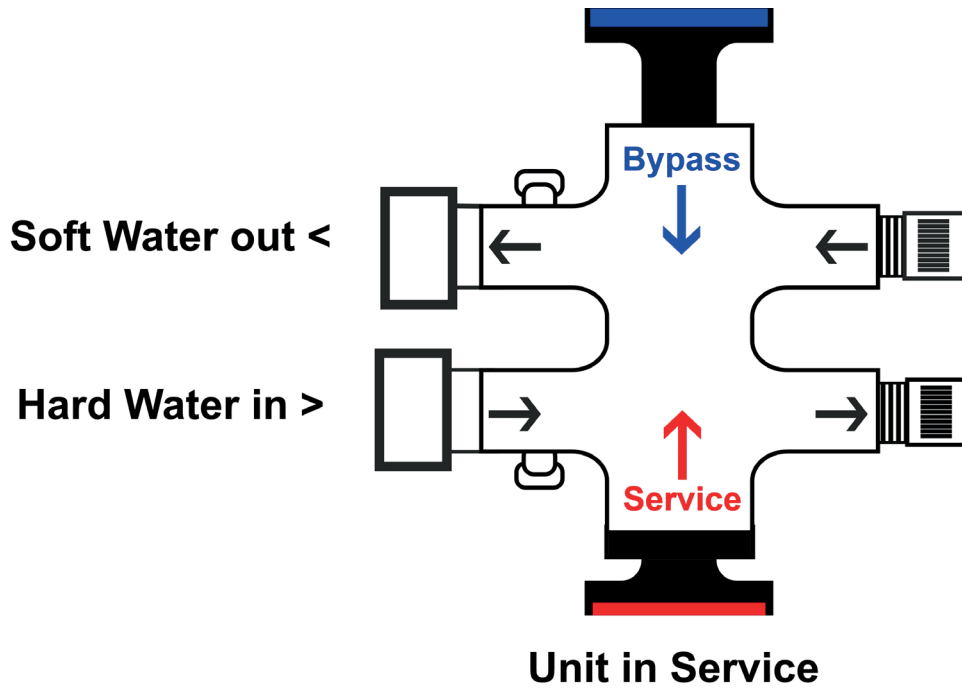

### UNIT IN BYPASS:

To place Rapid-Fit bypass into Bypass, push central plunger in direction of Bypass arrow.

